

How to Add an Epson Laser Printer in Windows 10

Follow this procedure to add your Epson Laser Printer in Windows 10. You do not need to download and install a driver as they are included with Windows 10 or through Windows Update.

If the printer was previously installed before upgrading to Windows 10, you might need to right click the printer icon and choose Remove Device before following this procedure.

If this method fails then your printer model may not be supported in Windows 10.

Instructions

- 1. Open the **Devices and Printers** Control Panel. Click **Add a printer**.
- 2. Click The printer that I want isn't listed.

Add a device	dd a printer		100 -	0
Devices (3)	Start the Add Printer Wizard, which			
	helps you install a printer			
		_		×
		_		\sim
Add a device				
Chasse	a device or printer to add to this DC			
Choose	a device or printer to add to this PC			
Select a de	ice			
				1
The printe	that I want isn't listed]
The printe	that I want isn't listed]
The printe	that I want isn't listed			J

3. Select My Printer is a little older. Help me find it. Click Next.

1		×
÷	🖶 Add Printer	
	Find a printer by other options	
	My printer is a little older. Help me find it.	
	O Select a shared printer by name B(owse	1
	Example: \\computername\printername or http://computername/printers/printername/.printer	
	○ Add a printer using a TCP/IP address or hostname	
	O Add a Bluetooth, wireless or network discoverable printer	
	○ Add a local printer or network printer with manual settings	
	Next Cance	

4. Click on the **printer icon** and click **Next**. If the printer is not shown <u>go to Step 7</u>.

Searching for available printers	
AL-CX11 (EPSON)	
	Stop
	Stop



5. Enter a **name** for the printer and click **Next**.

		×
~	🖶 Add Printer	
	The second descent	
	Type a printer name	
	Printer name: Epson AL-CX11NF]
	This printer will be installed with the Epson ESC/PageS V4 Class Driver driver.	
	Next Canc	
	Next Canc	ei

- 6. Once the printer is added click **Print a test page** to confirm it is working. Then click **Finish**.
- Add Printer

 You've successfully added Epson AL-CX11NF

 Set as the default printer

 To check if your printer is working properly, or to see troubleshooting information for the printer, print a
 test page.

 Print a test page

 Ensish Cancel
- 7. You can add the printer on the network using the IP address. Select Add a printer using a TCP/IP address or hostname. Click Next.

17		х
~	🖶 Add Printer	
	Find a printer by other options	
	O My printer is a little older. Help me find it.	
	○ <u>Select a shared printer by name</u>	
	Browse	
	Example: \\computername\printername or http://computername/printers/printername/.printer	
	Add a printer using a TCP/IP address or hostname	
	○ Add a Bluetooth, wireless or network discoverable printer	
	○ Add a local printer or network printer with manual settings	
	<u>N</u> ext Cance	ł

8. Enter the printer's **IP address** and click **Next**. Return to Step 5.

Add Printer		
Type a printer hostnam	ne or IP address	
Device type:	Autodetect	
Hostname or IP address:	10.1.1.12	
Port name:	10.1.1.12_1	
Ouerv the printer and auto	omatically select the driver to use	
E goeij the printer and adde		